

Release Notes

Nokia Mediamaster 9800 S

1. IDENTIFICATION

Software version: MA 2.0

Baseline MA 2.0.9

2. PREVIOUS RELEASE

Software version MA 1.31

3. NEW FUNCTIONALITY

- Support for multiple channel deletion. See below for instructions.
- Timer TV and radio channels. See below for instructions.
- Support for Dolby digital sound. If available, you can select either the normal audio type MPEG or the enhanced audio type Dolby Digital, by pressing options (green button) or going to language preferences in User preferences menu.
- Support for choosing different video tracks if available by pressing options (green button), e.g. viewing a sport event from different camera angles.
- It is possible to search for a specific channel in TV and radio lists. See below for instructions.
- The channel lists are now sorted in alphabetical order.
- Possibility to program recurring reminder (daily, weekly)
- Support for DVB subtitling which is a new digital standard for subtitling.
- Assigning the receiver a number. If you have several digital TV receivers, which use the same IR protocol for the remote control, you can use the same remote control up to four different digital TV receivers. You will find the new function in the menu "User preferences" and "Number on receiver".
- If available, you can select the preferred CA system for decoding the current channel. The default choice is "Automatic".
- Possible to clone box to box.

4. ENHANCED FUNCTIONS

- The improved channel table allowing 5000 channels to be stored. 18 favorite lists holding 99 channels each, arbitrarily divided between radio and TV
- Data channels will be stored in a separate list when doing a new channel search.
- There are faster response time in menus, lists and reminder.
- When using motor antenna channel change feedback is improved, the rotating wheel is shown in case of excessively long channel changes (approx 5-10 sec)
- In all edit channels views (select, lock, rename, rearrange and remove) the STB will tune to the currently selected channel.
- When editing a channel it is not saved until the user exit the view.
- Transparency in teletext is implemented, use +/- button when teletext is shown
- Improvements to the SW have been done to improve lipsync (unsynchronized picture and sound).
- Improved first time installation, including e.g. simultaneous vision of signal quality and signal strength.
- New menus for configuration of DiSEqC switch.
- Updated satellite list for SatScan system

Nokia Home Communications

- Nilesat added to the predefined channels.

5. KNOWN LIMITATIONS

- You cannot delete the whole data list at once, you must delete channel by channel
- You cannot add data channels to a favourite list.

6. RECOMMENDATIONS

Since there is only room for 99 services in MA 2.0 favorite lists with more channels will be cut out.

If you want data channels to be sorted in a separate list you must do a First Time Installation.

7. HINTS

How to use the channel name search function:

To search for a specific channel within a list, press **OPTION** to display the search dialog. Enter search criteria and press **OK**. The entered search criteria are displayed at the bottom of the list and the first matching channel is highlighted. Step between each further matching channel by pressing the **blue button**. Press **OPTION** to leave the channel search mode.

The search functionality is available everywhere a list of channels is displayed

How to delete channels

The MA 2.0 software has a new way of deleting channels. The function is located as a menu choice selected from the menu entry "Edit Channels". To delete a channel, network or satellites please select the item and the press the **OK** button. The channels that will be deleted are now marked with a trashcan and a checked box. Each reselection of an item will toggle the trashcan icon on and off indicating if the channel(s) will be deleted or not. When the selections are made the actually deletion will be performed when the **back button** is pressed but only after a confirmation request.

How to use the timer

General

You can program the Mediamaster to start and stop at a predefined time. The function is very useful when you want to record, on a connected VCR, a programme and you are unable to start/stop the recording event yourself or when you just want to be reminded of the start of a programme you do not want to miss. Setting the Timer Function on a programme that has already started will lock the box. The display on the box will indicate "t x" (where x is the channel number) while you are watching a programme you have been reminded to watch. Pressing any button will display a dialog to allow you acknowledge if the ongoing timer is to be cancelled or not.

Important information related to the timer recording

If you program the box to perform a timed recording e.g. in the middle of the night (or at any other unsuitable time), be sure to turn the TV set off with the mechanical switch located on the TV! If you turn the

Nokia Home Communications

TV set off by just putting it into standby mode with the remote controll, it will be turned on at the time for the recording!

Timer setup

- Select Timer from the Main Menu.
- Press OK to enter the Timer Setup menu from where you make the settings.
- First, select Channel List with the buttons.
- Then, step to Channel to select desired TV/Radio channel.
- The present date (month/day) will automatically be preset.
- When you change month and day, always use two digits for each of them.
- If you enter a wrong digit you can erase it with the button. The different start times may never overlap each other. If you try to enter a start or stop time within an already occupied period of time you will get a warning message about it.
- A timer event can be started once, repeated daily or weekly.
- Up to 9 different events can be predefined. The events will be sorted in start time order. At each stop time the box will return to the state it had before it started. You can erase a predefined event by pressing the button twice. (If you regret the command after the first press, go to another line by pressing either/or, and the event will not be erased.)