

User Guide for downloading the latest system software to Nokia Mediamaster 9665 S


1 INTRODUCTION

This document describes how to download the latest system software to your Nokia Mediamaster.


2 SETTINGS

- Save the Update File into a new directory/folder of your PC.
- Unzip the Update File
- Start the Download Program by opening "Flashprogrammer.exe"
- Follow the instructions on the screen:

3 CHOOSE A FREE COM PORT AND PRESS NEXT

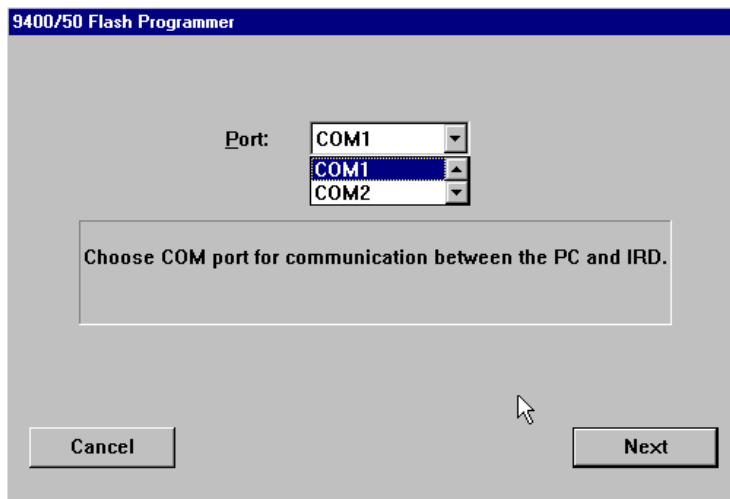


4 CONNECT A SERIAL NULL MODEM CABLE BETWEEN YOUR MEDIAMASTER (IRD) AND YOUR PC

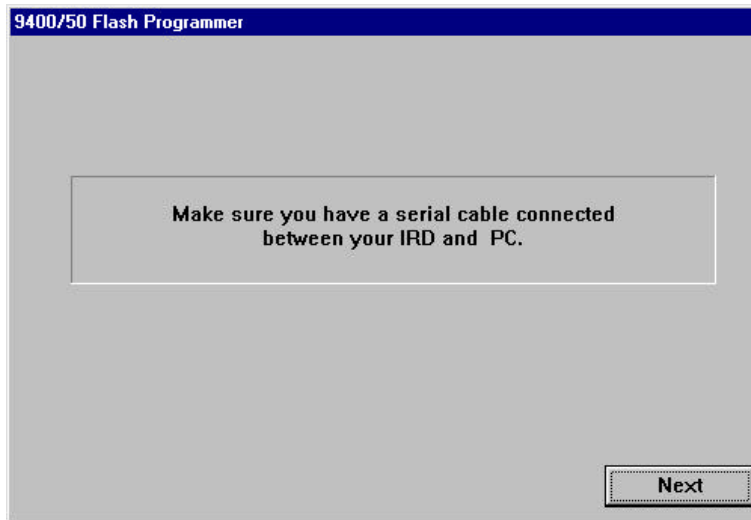


5 DISCONNECT YOUR MEDIAMASTER (IRD) FROM POWER AND PRESS NEXT




6 CONNECT YOUR MEDIAMASTER TO POWER WITHIN 10 SECONDS!

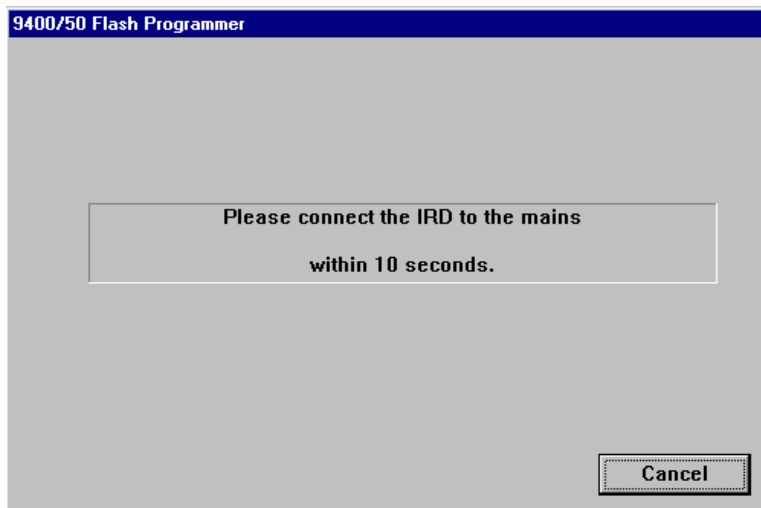


- 7 CHOOSE THE UNZIPPED MEDIAMASTER SOFTWARE FILE (THE SW.BIN) AND PRESS OPEN.

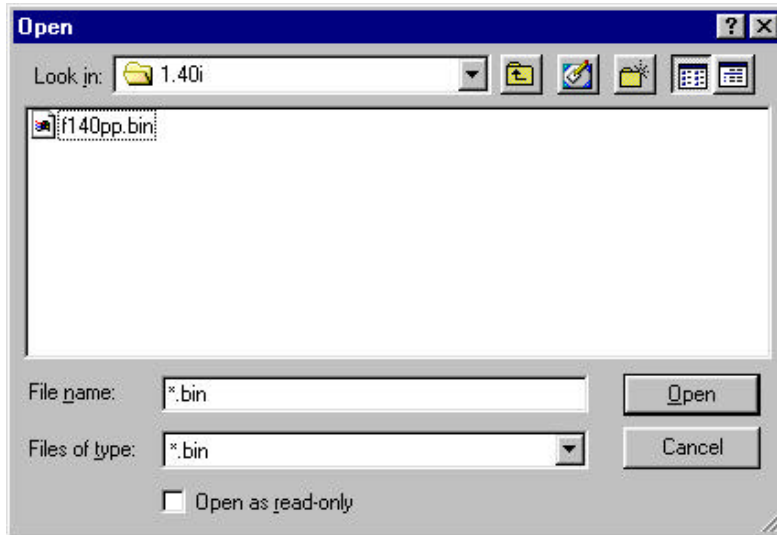

- 8 PLEASE NOTE THAT YOUR CURRENT CHANNELLIST AND SETTINGS WILL BE LOST WHEN DOWNLOADING THE NEW SOFTWARE.

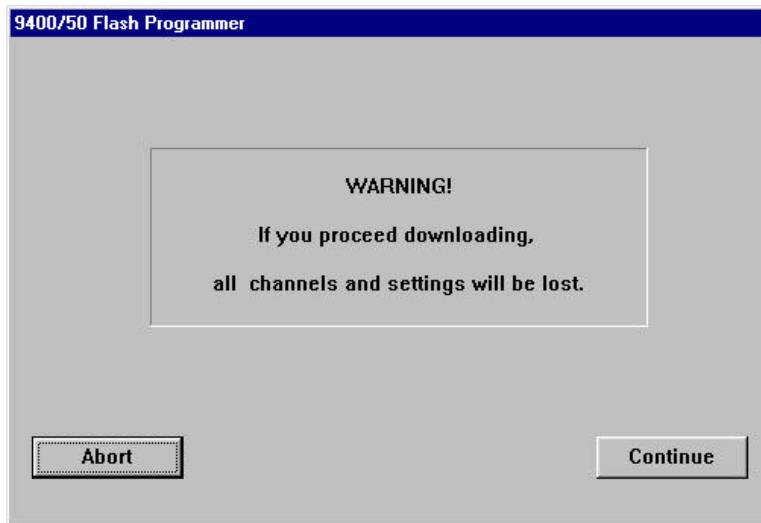

9 CONGRATULATIONS! YOU ARE NOW DOWNLOADING THE LATEST SOFTWARE TO YOUR MEDIAMASTER

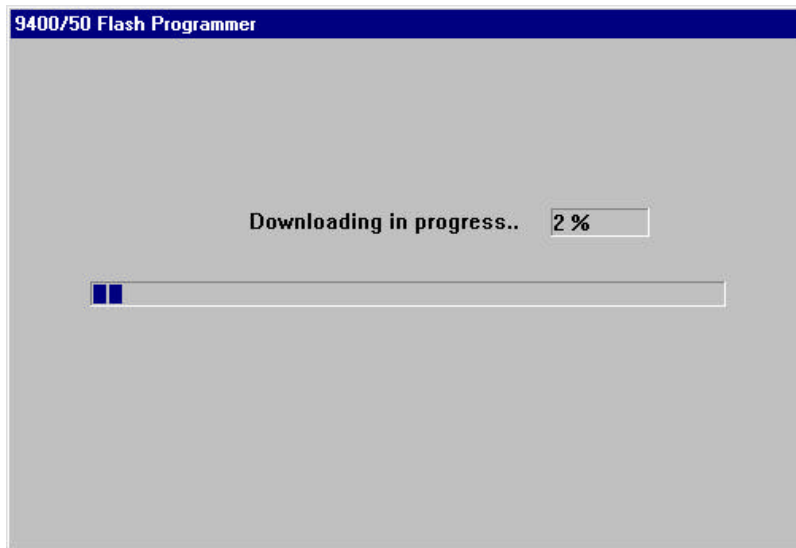

10 IF YOU DIDN'T SUCCEED, PRESS OK AND TRY AGAIN FROM BEGINNING

