

Nokia Mediamaster 9902S

New features of software release AD 3.0

The improved channel table allows 5000 channels to be stored. Each of the 18 favourite lists holds 99 channels, arbitrarily divided between radio and TV. There is also a separate list for storing data channels.

VIEWING MODE

List of TV and radio channels

To search for a specific channel in a list, press **OPTION** to display the search dialog. Enter the search criteria and press **OK**. The entered search criteria is displayed at the bottom of the list and the first matching channel is highlighted. Move to the next channel that matches by pressing the **blue button**. Press **OPTION** to leave the channel search mode.

The search functionality is available whenever a list of channels is displayed.

Options (green button)

Audio type

If available, you can select either MPEG (normal audio type) or Dolby Digital (enhanced audio type), which is also referred to as AC3.

Video

If available, you can select from the different video tracks.

HARD DISK RECORDING

To stop playback

- During playback, press the **PAD** button to pick up the recording menu.
- Move down to the stop icon in the menu.
- Stop the playback by pressing the **OK** button once. The current position of the playback is now memorised so that the selected recording will start from the stop position the next time it is played back.
- If the **OK** button is pressed twice, the next time the selected recording is played back, it will start from the beginning of the recording.

To jump during playback

When playing back a recording, it is possible to jump 1 to 9 minutes forward by pressing the numeric buttons **1** through **9**.

MAIN MENU

User preferences

Language preferences

Audio type

If more than one audio type is transmitted, you may now select which type will be the default audio type.

Recording preferences

Timer recording type

The default timer recording type displayed in the “Timer set-up” view will be affected by what is set under this menu.

Standby after recording

This setting controls whether the box is to remain in view mode or if it will automatically be go to standby mode after recording is finished.

Hard disk preferences

Hard disk spin down time

The time the hard disk will continue to spin after the last hard disc drive access will be affected by what is set under this menu.

Timer

Recurrence

Each timer event set can be selected to be repeated daily or weekly.

Action

Pause can be selected to be a complement to **Record**, in which case the recording will interpret it as a normal “Pause recording”.