



SUPPORT GUIDE FOR E-MAIL SETTINGS IN NOKIA 6800

NOKIA





Contents

- 1. INTRODUCTION 1
- 2. SERVICE SETTINGS FOR E-MAIL 1
- 3. E-MAIL SETTINGS 3

Copyright © Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.



1. INTRODUCTION

To use the e-mail function on your phone, you need an e-mail account and two types of settings in your phone: 1) Service settings that contain the access point settings for e-mail and 2) E-mail settings. Firstly, set the service settings, secondly, select the access point that you want to use, and, finally, key in the e-mail settings. For more information, see your phone's user's guide.

2. SERVICE SETTINGS FOR E-MAIL

Press Menu and select *Services, Settings, Connection settings*. Select the first free set and press Activate. Then select *Edit active service settings*. For the availability of the service settings, contact your network operator or service provider.

Setting	Explanation
<i>Settings' name</i>	The name of the connection set. Max. 20 characters. You can use any name.
<i>Homepage</i>	Not needed
<i>Session mode</i>	Select <i>Permanent</i> or <i>Temporary</i> .
<i>Connection security</i>	Select <i>On</i> or <i>Off</i> .
<i>Data bearer</i>	Select <i>GSM data</i> or <i>GPRS</i> . If you select <i>GSM data</i> , the settings are listed in 2.1. If you select <i>GPRS</i> , the settings are listed in 2.2.

2.1 GSM DATA BEARER SETTINGS

Bearer settings: Use *GSM data* when your e-mail service provider requires dial-up access and gives you a specific phone number.

Setting	Explanation
<i>Dial-up number</i>	Local or international phone number
<i>IP address</i>	Not needed
<i>Authentication type</i>	Select <i>Normal</i> .
<i>Data call type</i>	Select <i>Analogue</i> or <i>ISDN</i> (v.110) depending on the network and modem. Check with your Internet access provider.
<i>Data call speed</i>	Select <i>9600/14 400</i>
<i>Login type</i>	Select <i>Manual</i> or <i>Automatic</i> depending on the access point in use. Check with your network operator or service provider.
<i>User name</i>	Key in the user name, max. 32 characters.
<i>Password</i>	Key in the password, max. 32 characters.



<i>Display terminal window</i>	Select <i>Yes</i> to do manual user authentication for intranet connections.
--------------------------------	--

2.2 GPRS BEARER SETTINGS

Bearer settings: Use *GPRS* if your e-mail service provider allows access through GPRS connection provided by the network operator.

Setting	Explanation
<i>GPRS access point</i>	Key in the access point name
<i>IP address</i>	Not needed.
<i>Authentication type</i>	Select <i>Normal</i> .
<i>Login type</i>	Select <i>Manual</i> or <i>Automatic</i> depending on the access point in use. Check with your network operator or service provider.
<i>User name</i>	Key in the user name, max. 32 characters.
<i>Password</i>	Key in the password, max. 32 characters.

Note that you may need different service settings for WAP and e-mail. Some e-mail service providers may not allow access to your e-mail via a different service provider's server.

Next you have to define e-mail settings.

2.3 ACCESS POINT SETTINGS


Press Menu and select *Messages, E-mail, Service settings*.

Settings	Explanation
<i>Application</i>	Activates the e-mail service settings for the e-mail application.
<i>Default</i>	Select <i>Default</i> , if your e-mail uses the same settings as currently selected for the WAP browser.




3. E-MAIL SETTINGS

Press Menu and select *Messages, E-mail, Open, Settings, Mailbox in use*. Select the mailbox that you want to edit and select *Edit active mailbox*.

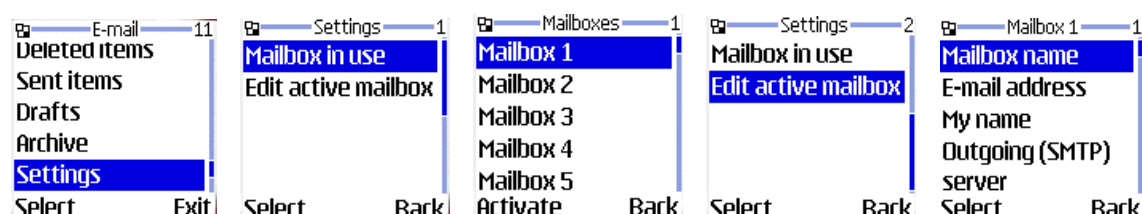

Pictures 1 – 5. Steps to active mailbox settings.

Setting	Explanation	Where to find or obtain
<i>Mailbox name</i>	The name for the mailbox.	You can use any name.
<i>E-mail address</i>	Your e-mail address	E-mail service provider
<i>My name</i>	Name or nickname, if you want the recipient see it.	Use any name.
<i>Outgoing (SMTP) server</i>	E-mail server address	E-mail service provider
<i>Outgoing (SMTP) port</i>	SMTP port number for outgoing e-mails (common value is 25)	E-mail service provider
<i>Use SMTP authorisation</i>	Set to Yes, if the e-mail service provider requires authentication for sending e-mails.	E-mail service provider
<i>SMTP user name</i>	User name for outgoing e-mails	E-mail service provider
<i>SMTP password</i>	Password for outgoing e-mails	E-mail service provider
<i>Include signature</i>	Personal signature that is automatically added to the end of the e-mail	You can define it.
<i>Incoming (POP3/IMAP) server</i>	E-mail server address for the incoming e-mail.	E-mail service provider
<i>Incoming (POP3/IMAP) port</i>	Port number: 110 for POP3 and 143 for IMAP	E-mail service provider
<i>POP3/IMAP user name</i>	User name to access the mailbox.	E-mail service provider
<i>POP3/IMAP password</i>	Password to access the mailbox.	E-mail service provider
<i>Reply-to address</i>	Another e-mail address for your incoming e-mails that differs from the one defined in <i>E-mail address</i> .	You can define it.



<i>Incoming server type</i>	Either <i>POP3</i> or <i>IMAP4</i> . If both types are supported, select <i>IMAP4</i> . Changing the server type also changes the incoming port number.	E-mail service provider
<i>Secure login APOP</i>	For <i>POP3</i> only: <i>On</i> for the connection requiring an encrypted login, otherwise <i>Off</i> .*	E-mail service provider
<i>Retrieve mails</i>	Can be set between 1 and 50 to retrieve desired number of e-mail messages.	You can define it.

* Using encrypted login enables increased security for user names and passwords. It does not increase security for the connection itself.

You should now be able to send and receive e-mail messages with your Nokia 6800 Messaging Phone.