



INSTALLATION GUIDE FOR THE NOKIA C910 WINDOWS 2000 SOFTWARE

NOKIA





Legal Notice

Copyright © Nokia Mobile Phones 2001. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.



1. INSTALLATION



Caution: Do not insert a PC card into the PCI adapter until the installation of the software has been completed and you have restarted the computer.



Note: Make sure that your computer has enough resources for the PCI adapter and the wireless LAN card.

1. Switch on the computer and start Windows.
2. Insert the installation diskette into the diskette drive of the computer.
(Alternatively you can download the driver from www.forum.nokia.com to a folder on the local hard drive)
3. From the Start menu, select **Run** and type A:\Nokia C910.exe (provided that drive A: is your diskette drive, or run the program from the folder where you downloaded it to). Click **OK**.



Note: If you have a previously installed Nokia C910 on your computer, the program now asks whether you want to remove its drivers. Click **Yes**, and the program uninstalls the previous drivers.

4. A welcome screen opens. Click **Next** to continue.
5. Read through and accept the Nokia license agreement. If you do not accept the license agreement, you cannot use the software and the installation procedure stops. Click **Yes** to accept the license agreement.
6. A screen displaying which files will be installed is displayed. Click **Next**.
7. The installation program starts copying the files. Click **Next**.
8. The Nokia C910 is now installed. If you wish, you can also install the Nokia C020/C021 or Nokia C110/C111 Wireless LAN Card: select the card you want to install, click **Next** and, when prompted, insert the card's CD-ROM into the CD-ROM drive.
9. If you do not want to install a card, or you have already installed one, or you want to install another type of Nokia card, select the *Other Nokia card* or *No card* option.
10. The Setup Complete window informs you when the installation is completed. You may need to restart your computer before you can use the adapter. Follow the on-screen instructions.
11. Remove the installation diskette from the diskette drive and click **Finish**.



Note: The Nokia C910 will be installed as "Cirrus Logic PCI to PCMCIA bridge".