



NOKIA
E70

NOKIA
Connecting People

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation

Nokia E70

Backing up data

Legal Notice

Copyright © Nokia 2006. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

Nokia operates a policy of ongoing development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

Copyright to the Windows screenshots belongs to Microsoft.

Backing up data

The purpose of this support guide is to help you create backup copies of your device's contents. You can create these copies on your memory card or on a compatible PC that has the PC Suite application installed.

Before you begin creating backup files, do the following:

- Close all other applications.
- Make sure you have enough battery power.

On memory card

 
Before starting the backup process, make sure that a compatible mini Secure Digital (miniSD) card is inserted in your device.

To back up information from device memory to a memory card, select **Menu**→ *Tools*→ *Memory card*→ *Options*→ *Backup phone mem.*


Do not remove a memory card when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

On PC


- 1 Connect your Nokia E70 to a PC that has Nokia PC Suite for the Nokia E70 installed.
- 2 Open *Nokia PC Suite* for the Nokia E70 on the PC, and click **Backup**. The *Nokia Content Copier* opens.
- 3 Make sure the application recognizes your device. If the device is not correct, make sure it is connected correctly, and click **Select Phone** to select the right device.
- 4 Click **Back Up** to continue.

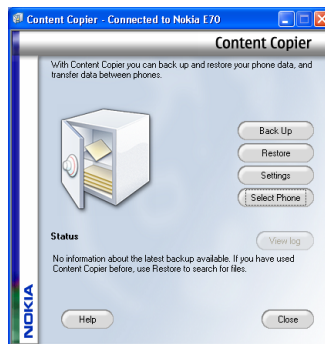

 - 5 The backup operation begins. To stop the backup, click **Cancel**.

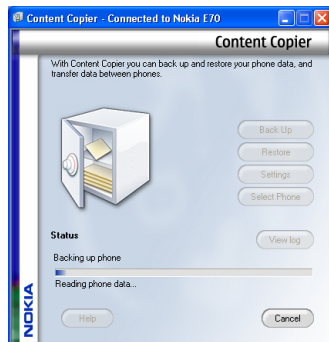

 - 6 After the backup has finished, Nokia Content Copier displays a status report of the operation. Click **Close** to finish and close Nokia Content Copier or **View log** to view details of the backup.

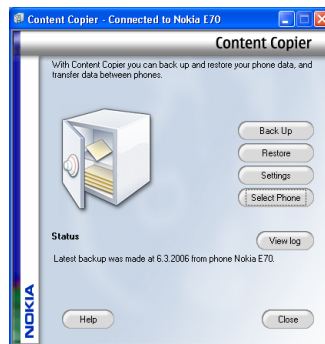

Restoring backup data

From memory card

 
To back up information from device memory to a memory card, select **Menu**→ **Tools**→ **Memory card**→ **Options**→ **Restore from card**.

Do not remove a memory card when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.


From PC

- 1 Connect your Nokia E70 to a PC that has Nokia PC Suite for the Nokia E70 installed.
- 2 Open **Nokia PC Suite** for the Nokia E70 on the PC, and click **Backup**. The **Nokia Content Copier** opens.
- 3 Make sure the application recognizes your device. If the device is not correct, make sure it is connected correctly, and click **Select Phone** to select the right device.


- 4 Click **Restore** to continue.

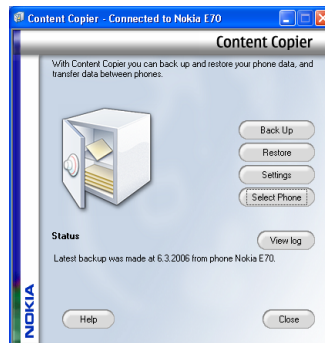

 - 5 Select the data you want to restore, and define the file that contains the backup data. When you are done, click **OK** to continue.

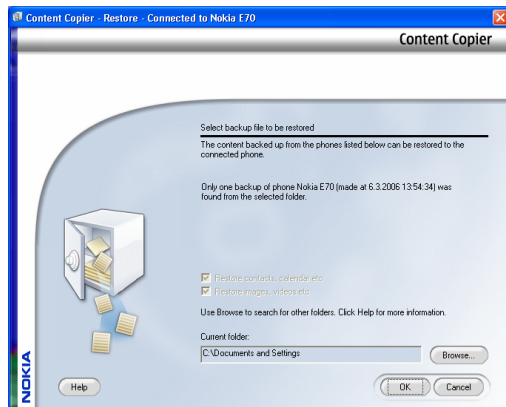

 - 6 The data is restored to your Nokia E70. To stop the data transfer, click **Cancel**.

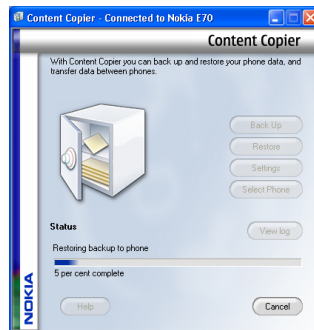

- 7 Select **OK** to restart your Nokia E70.
- 8 After the restore has finished, click **Close** to finish and close Nokia Content Copier or **View log** to view details of the restore.