



**NOKIA**  
Eseries

**Nokia E71**

# Step 1



## Insert the SIM card, memory card, and battery




Use only microSD and microSDHC cards approved by Nokia for use with this device. Nokia utilises the approved industry standards for memory cards but not all other brands may function correctly or be fully compatible with this device.

Memory cards are available as separate enhancements.


# Step 2

## Charge the battery

- 1 Connect a compatible charger to a wall outlet.
- 2 Connect the power cord to the device. If the battery is completely discharged, it may take a while before the charging indicator starts scrolling.
- 3 When the battery is fully charged according to the battery level indicator , disconnect the charger from the device, then from the wall outlet.



## First start-up

- 1 Press and hold the power key  until you feel the device vibrate.
- 2 If prompted, enter the PIN code or lock code, and select **OK**.
- 3 When prompted, enter the country in which you are located, and the current date and time.
- 4 The Welcome application opens. Select from the various options, or select **Exit** to close the application.

To configure the various settings in your device, use the wizards available on the home screen and the Settings wizard application (**Menu > Tools > Settings wizard**). When you switch the device on, it may recognise the SIM card provider and configure some settings automatically. You can also contact your service provider for the correct settings.

You can switch the device on without inserting a SIM card. The device starts up in the offline mode, and you cannot use the network-dependent phone functions.

To switch the device off, press and hold the power key.

# Keys and parts

- 1 Earpiece
- 2 Light sensor
- 3 Navi™ key, hereafter referred to as the scroll key. Press the scroll key to make a selection, or to scroll left, right, up, and down on the display. A long press of the scroll key accelerates the scrolling.
- 4 Selection key. Press the selection key to perform the function shown above it on the display.
- 5 Call key
- 6 Microphone
- 7 Charger connector
- 8 Power key
- 9 Camera (video calls only)
- 10 Selection key
- 11 End key. Press the end key to reject a call, and end active calls and calls on hold. With a long keypress, end data connections.
- 12 Backspace key
- 13 Enter key



## Function, shift, chr, and ctrl

To insert digits or characters printed at the top of keys, press and hold the function key (1) and press the corresponding key, or press and hold the corresponding key only.

To enter only the characters printed at the top of keys, press the function key twice quickly.

To set the predictive text input on or off, press the function key and the space bar.

To switch between the different character cases, press the shift key (2).

When writing text, press the chr key (3) to insert characters not shown on the keypad.

To access the shortcuts behind the ctrl key, such as ctrl + c, press the function key and the chr key to enter ctrl, and then press the desired key, for example c.



## One-touch keys

With the One-touch keys, you can access applications and tasks quickly.



Key	Short press	2nd short press	Long press
Home key (1)	Access the home screen	Open the menu	View the list of active applications
Calendar key (2)	Open the Calendar application	Return to the previous application	Create a meeting entry
Contacts key (3)	Open the Contacts application	Return to the previous application	Create a contact
E-mail key (4)	Open your default mailbox	Return to the previous application	Create an e-mail message

## Scroll key lights

When you receive a message or miss a call, the scroll key starts blinking.

When the display lights turn off, the scroll key starts blinking slowly to indicate the standby mode.

## Sides

- 1 Headset connector
- 2 Volume up key
- 3 Voice key. Press this key to mute and unmute the active call. This key is also used in the [Voice commands](#) and [PTT](#) applications.
- 4 Volume down key
- 5 Infrared port
- 6 Memory card slot
- 7 Micro-USB connector



# Home screen


From the home screen you can quickly access features that you use the most, and see at a glance any missed calls or new messages.

The home screen consists of the following:

- 1 Application shortcuts. To access an application, scroll to its shortcut and press the scroll key.
- 2 Information area. To check an item displayed in the information area, scroll to it and press the scroll key.
- 3 Notification area. To view the notifications, scroll to a box. A box is only visible if there are items in it.



You can define two home screen modes for different purposes, such as one mode to show your business e-mail and notifications, and another to show your personal e-mail. This way, you do not have to see business-related messages outside office hours.

To change from one home screen mode to another, scroll to  and press the scroll key.



To define what kind of items and shortcuts you want to see on the home screen, and to set the appearance of the home screen, select [Menu](#) > [Tools](#) > [Modes](#).

## Find contacts


To find contacts in the home screen, start entering the name of the contact. The device gives you suggestions on matching contacts. Scroll to the desired contact. This feature may not be available in all languages.

To call the found contact, press the call key. For other actions, scroll right and select the desired action.

# Access tasks quickly

Whenever you see the ► icon on the home screen, or in the Contacts, or Calendar applications, scroll right to access a list of available actions. To close the list, scroll left.

When you navigate in these applications, to go back to the previous level, scroll left.

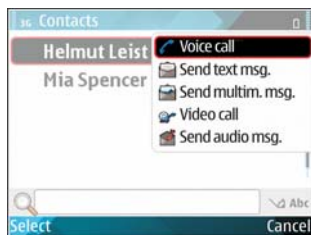

## Transfer content from another device

With the Switch application, you can transfer content from a compatible Nokia device to your Nokia E71 using Bluetooth connectivity or infrared. The type of content that can be transferred depends on the device model. Select **Menu > Tools > Switch**, and follow the instructions on the device display. If the other device supports synchronisation, you can also synchronise data between the two devices.

When you transfer data from your previous device, you may need to insert a SIM card. The Nokia E71 does not need a SIM card for transferring data.

You can also use Nokia PC Suite to copy content from a compatible Nokia device. For more information, see [www.nokia.com/pcsuite](http://www.nokia.com/pcsuite).

## Set up your e-mail

With the e-mail wizard, you can set up your business e-mail account, such as Microsoft Outlook, or Microsoft Exchange; and internet e-mail account, such as Google e-mail services.

To start the e-mail wizard:

- 1 Go to the home screen, scroll to the e-mail wizard, and press the scroll key.
- 2 Enter your e-mail address and password. If the wizard is not able to configure your e-mail settings automatically, select your e-mail account type and enter the related settings.

If your device contains any additional e-mail clients, those are offered to you when you start the e-mail wizard.

When setting up your e-mail, you may be prompted for the following information:

- User name
- E-mail type
- Incoming mail server
- Incoming mail server port
- Outgoing mail server
- Outgoing mail server port
- Password
- Access point

If you are setting up your business e-mail, ask your company IT department for details. If you are setting up your internet e-mail, see your e-mail service provider's website for details.

## Camera

Select **Menu** > **Media** > **Camera**.

- 1 Camera lens
- 2 Flash



To capture an image, use the display as a viewfinder, and press the scroll key (3). The device saves the image in Gallery.

To zoom in or out before capturing an image, scroll up or down.

When capturing close-up images, press the T key (4) to focus on the subject before capturing the image.

To record videos with the camera, select the video mode from the toolbar on the display, and press the scroll key. To stop the recording, select **Stop**.



## Download!

Select **Menu** > **Download!**.

With Download!, you can browse, download, and install items, such as the latest applications and related documents, to your device from the web. The items are categorised under catalogs and folders provided by Nokia or independent service providers. Some items may be chargeable, but you can usually preview them free of charge.

Download! uses your network services to access the most up-to-date content. For information on additional items available through Download!, contact your service provider, or the supplier or manufacturer of the item.



Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

## GPS

The Global Positioning System (GPS) is a world wide radio navigation system. Your Nokia E71 has an internal GPS receiver.

## Maps

Select **Menu** > **GPS** > **Maps**.

With Maps, you can see your current location on the map, browse maps for different cities and countries, search for addresses and different points of interest, plan routes from one location to another, and save locations and send them to compatible devices.

Check the availability of this function from your local network operator.

## Tips for efficient use

To access the profiles, press the power key briefly.

To switch the device to the **Silent** profile, press and hold **#**.

To search for items in your device or on the internet (network service), select **Menu** > **Office** > **Search**.

To copy text, press and hold the shift key, and scroll to highlight the word or line of text you want to copy. Press the function key + chr + c. To insert the text into a document, move to the correct place and press the function key + chr + v.

When browsing web pages with the Web browser or maps in the Maps application, press **\*** to zoom in and **#** to zoom out.

There is a small mirror next to the camera flash. You can use it when taking a self-portrait.

# Further information

## User guidance

Your device has a tutorial, which shows you how to use the device. Select **Menu** > **Help** > **Tutorial**.

Your device has a help function, which provides you with detailed instructions and information. Select **Options** > **Help**.

For other important information about your device, see the user guide.

## Nokia PC Suite

Install Nokia PC Suite from the CD-ROM or from the web. Nokia PC Suite can be used with Windows 2000, Windows XP SP2, and Windows Vista. With Nokia PC Suite, you can make backups, synchronise your device with a compatible computer, move files between your device and a compatible computer, or use your device as a modem.

## Nokia support and contact information

Check [www.nokia.com/support](http://www.nokia.com/support) or your local Nokia web site for the latest

version of the user guide, additional information, downloads, and services related to your Nokia product.

If you need to contact customer service, check the list of local Nokia contact centres on [www.nokia.com/customerservice](http://www.nokia.com/customerservice).

For maintenance services, check your nearest Nokia service centre on [www.nokia.com/repair](http://www.nokia.com/repair).

© 2008 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Eseries, Nokia E71, and Navi are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or trade names of their respective owners.