



11:58

Next

||Tab|space|←

↓ ↑

24.08.00

A Quick Guide to Using the Nokia 8890 with an Infrared data connection in a PocketPC device

SETTING UP A NEW CONNECTION

- Go to the Start menu and select Settings
- 2. Select Modem
- 3. You should now have a list of available connections; just click on the New Connection... option.
- 4. Now complete the settings as shown in the figures below:

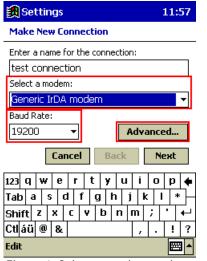


Figure 1. Select a modem and check the Baud Rate. After that tap Advanced...

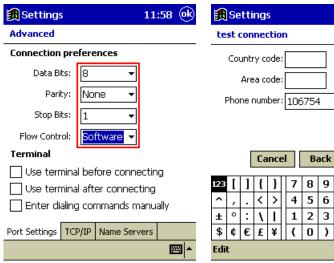


Figure 2. Check Connection Figure 3. Type in the ISP's phone preferences. Especially that number and then tap Next. the Flow Control selected is Software. Tap OK on upper right corner and then tap Next



Figure 4. Uncheck the Wait for Dial tone before dialing check box and tap Finish.



And go to Dialing Patterns...

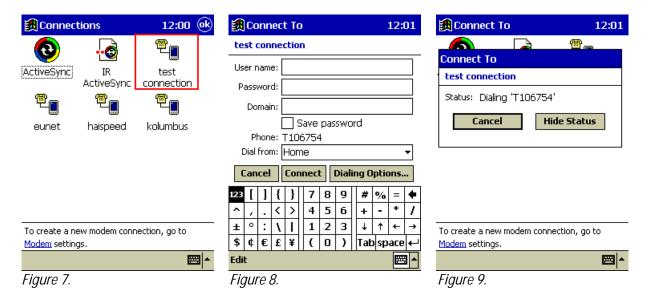


Figure 6. In some cases you may need to edit these to get the phone number right when dialing.



MAKING A DIAL-UP CONNECTION

- 1. Go to the Start menu and select Programs
- 2. Select Connections
- 3. You should now have the icons of the available connections; click on the connection you have just created (Figure 7).
- 4. Fill in your User name and Password and tap Connect (Figure 8)
- 5. Figures 9 and 10 shows the Status screens of the connection



Connected to test connection 12:03

Connected to test connection

test connection

Status: Connected

Disconnect

Hide Status

To create a new modem connection, go to Modem settings.

Figure 10.

6. You should now be connected to your ISP, so just start your Internet Explorer or Inbox.



HANGING UP THE CONNECTION

- 1. Go to the Start menu and select Today
- 2. Tap the connection icon in the lower right corner and
- 3. Select Disconnect (Figure 10).

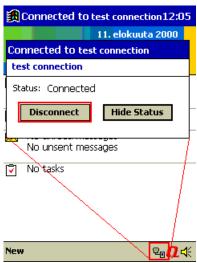


Figure 10.

Legal Notice

The contents of this document are copyright © 2000 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in any form without the prior written permission of Nokia is prohibited.

Nokia is a registered trademark of the Nokia Corporation. Nokia product names are either trademarks or registered trademarks of Nokia. Other product and company names mentioned herein may be trademarks of their respective owners.

The contents of this document are provided "as is". Except as required by the applicable law, no warranty of any kind, either express or implied, is made in relation to the accuracy, reliability or content of the document. Nokia reserves the right to revise the document or withdraw it at any time without prior notice.

Nokia is not responsible for any loss of data, income or any consequental damage howsoever caused.