


Nokia Bluetooth Headset BH-204

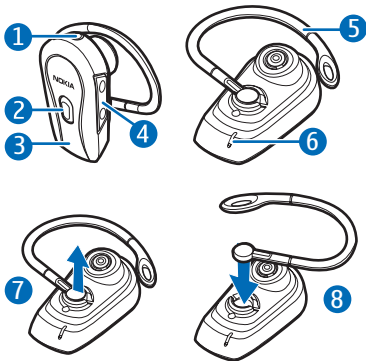

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this HS-84W product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

CE 0560



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

© 2006 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names

mentioned herein may be trademarks or tradenames of their respective owners. Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice. The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

Unauthorized changes or modifications to this device may void the user's authority to operate the equipment.

Export Controls

This device may contain commodities,

technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Introduction

The Nokia Bluetooth Headset BH-204 allows you to make and receive calls while on the move. You can use the headset with compatible phones that support Bluetooth wireless technology.

Read this user guide carefully before using the headset. Also read the user guide for your phone, which provides important safety and maintenance information. Keep the headset out of reach of small children.

Bluetooth wireless technology

Bluetooth wireless technology allows you to connect compatible devices

without cables. A Bluetooth connection does not require that the phone and the headset be in line of sight, but both devices should be within 10 meters (30 feet) of each other. Connections may be subject to interference from obstructions, such as walls, or other electronic devices.

The headset complies with the Bluetooth Specification 2.0 that supports the Headset Profile 1.1 and Handsfree Profile 1.5. Check with the manufacturers of other devices to determine their compatibility with this device.

There may be restrictions on using Bluetooth technology in some

locations. Check with your local authorities or service provider.

Get started

The headset contains the following parts shown on the title page: charger connector (1), multifunction key (2), indicator light (3), volume keys (4), earloop (5), and microphone (6).

Before using the headset, you must charge the battery and pair the headset with a compatible phone.



Note: Parts of the headset are magnetic. Metallic materials may be attracted to the

headset. Do not place credit cards or other magnetic storage media near the headset, because information stored on them may be erased.

Chargers

Check the model number of any charger before using it with this device. The

headset is intended for use with the AC-1, ACP-8, ACP-12, and LCH-12 chargers.



Warning: Use only chargers approved by Nokia for use with this particular

enhancement. The use of any other types may invalidate any approval or warranty and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

Charge the battery

The headset has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery

from the device, as you may damage the device.

1. Connect the charger to a wall outlet.
2. Connect the charger cable to the charger connector on the headset. The red indicator light is displayed while charging. It may take a while before charging starts. If charging does not start, connect the charger again, and retry. Charging the battery fully may take up to 2 hours.
3. When the battery is fully charged, the red indicator light turns off. Disconnect the charger from the headset and the wall outlet.

The fully charged battery has power for up to 10 hours of talk time or up to 240 hours of standby time. However, the talk and standby times may vary when used with different mobile phones or other compatible Bluetooth

devices, usage settings, usage styles, and environments.

When battery power is low, the indicator light flashes quickly and the headset beeps every 20 seconds.

Switch the headset on or off

To switch on, press and hold the multifunction key until the headset beeps and the blue indicator light is displayed.

To switch off, press and hold the multifunction key until the headset beeps and the red indicator light is displayed briefly.

Pair the headset

1. Switch on your phone and the headset.
2. Press and hold the volume up (+) key and the volume down (-) key at the same time until the blue and red indicator lights start to alternate.

3. Activate the Bluetooth feature on the phone, and set the phone to search for Bluetooth devices.
4. Select the headset from the list of found devices.
5. Enter the passcode 0000 to pair and connect the headset to your phone. In some phones you may need to make the connection

separately after pairing. You only need to pair the headset with your phone once.

If the pairing is successful, the headset beeps once and appears in the phone menu where you can view the currently paired Bluetooth devices. The headset is now ready for use.

Basic use

Wear the headset

Slide the earloop behind your ear, and point the headset toward your mouth. To use the headset on the left ear, gently detach (7), flip, and attach (8) the earloop.

Call handling

To make a call, use your phone in the normal way when the headset is connected to your phone.

If your phone supports last number redialing with the headset, press and hold the volume up key when no call is in progress.

If your phone supports voice dialing with the headset, press and hold the volume down key when no call in progress, and proceed as described in the user guide of your phone.

To answer or end a call, press the multifunction key. To reject an incoming call, press the multifunction key twice.

To mute or unmute the microphone during a call, press and hold the multifunction key and the volume up key at the same time.

To switch the call between the headset and your compatible phone, press and hold the multifunction key and the volume down key at the same time.

To adjust the earpiece volume during a call, press the volume up (+) key to increase or the volume down (-) key to decrease the volume.

Battery information

Your device is powered by a rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Recharge your battery only with Nokia approved chargers designated for this device.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If

left unused, a fully charged battery will lose its charge over time.

Never use any charger that is damaged.

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery.

Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is

particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also

explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep all accessories and enhancements out of the reach of small children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts

and electronic components can be damaged.

- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.