



SUPPORT GUIDE FOR E-MAIL SETTINGS IN NOKIA 6810 MESSAGING DEVICE



Contents

1. INTRODUCTION1

2. SETTINGS FOR GSM-DATA AND GPRS E-MAIL CONNECTION.....3

 2.1 COMMON SETTINGS.....3

 2.2 GSM-DATA CONNECTION5

 2.3 GPRS CONNECTION6

Copyright © Nokia 2004. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.



1. INTRODUCTION



To use the e-mail service in your Nokia 6810 messaging device, you need to have proper connection settings on the phone. You may key in the settings manually by following this guide or receive the settings directly as an over the air message (OTA) and save them on your Nokia 6810 messaging device. For more information on the availability of the e-mail services, please contact your network operator, service provider or the nearest authorized Nokia dealer. Some of the most common email service provider settings are also available through Nokia Phone Support web pages: www.nokia.com/phonesettings (site address may vary depending on your country).

You will need to collect some basic information before you start the manual configuration from your e-mail service provider and/or from the network service provider.

Note! The exact settings for the E-mail service will vary with E-mail Service Providers.

| E-mail settings | Example setting | Your setting |
|--|-----------------|--------------|
| Incoming mail type | POP3 | |
| User name | john.doe | |
| Password | 1Flower | |
| Incoming server POP/IMAP address | Pop3.email.net | |
| Incoming POP/IMAP port | 110 | |
| Use SMTP authorization if yes, username and password | no | |

If you use a **GSM data** bearer, you need the following settings from your network or e-mail service provider:

| Service provider GSM data bearer settings | Example setting | Your setting |
|---|-----------------|--------------|
| Proxies | yes | |
| Primary proxy | 134.134.134.4 | |
| Secondary proxy | 8080 | |
| Dial-up number | +123 12 1234567 | |
| Data call type | ISDN | |



| | | |
|-------------------------|---------------|--|
| Data call speed | 14 400 | |
| Login type | automatic | |
| User name | Johns | |
| Password | 1Happy | |
| Display terminal window | yes | |
| Outgoing SMTP server | Smtp.mail.net | |

For the **GPRS data** connection, you need the following settings from your network or e-mail service provider:

| Operators GPRS bearer settings | Example setting | Your setting |
|---------------------------------------|------------------------|---------------------|
| Proxies | yes | |
| Primary proxy | 134.134.134.4 | |
| Secondary proxy | 8080 | |
| GPRS access point | internet | |
| Login type | manual | |
| User name | Johns | |
| Password | 1Happy | |
| Outgoing SMTP server* | Smtp.mail.net | |



 


2. **SETTINGS FOR GSM-DATA AND GPRS E-MAIL CONNECTION**

2.1 COMMON SETTINGS

Note! Please contact your E-mail Service Provider to get the exact service settings for your E-mail Service.


Start by pressing **Menu** and select **Messages, Message settings, E-mail settings**. First select **Active e-mail settings** and select the settings that you want to use for your e-mail account by pressing **Activate**. Then select **Edit active e-mail setting** and follow the instructions in the table below.

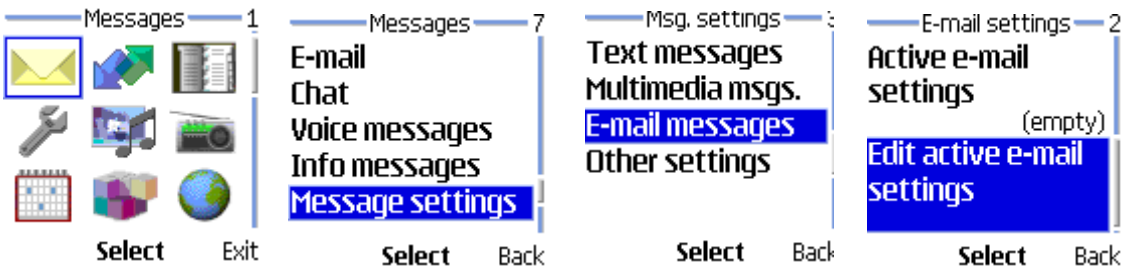

| Setting | Explanation |
|------------------------------|--|
| Mailbox name | Key in your mailbox name. Max. 50 characters. |
| E-mail address | Key in your e-mail address |
| My name | Key in your name or nickname. Will be shown when sending e-mail. |
| Outgoing SMTP server | Key in the SMTP server address. |
| Incoming server type | Select once IMAP4 or POP3 and rest of the settings will follow your choice |
| Incoming (IMAP4/POP3) server | Define the server address |
| POP3/IMAP4 username | Username to access the POP/IMAP server |
| POP3/IMAP4 password | Password to access the POP/IMAP server |



 Next, select **Other settings**

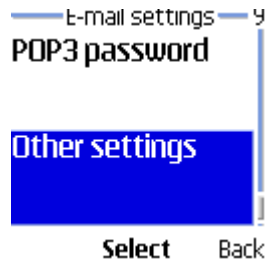


| Setting | Explanation |
|----------------------------|---|
| Include signature | Select Yes/No. If yes, key in personal signature that is automatically added to the end of the e-mail. |
| Use SMTP authorization | If your service provider requires SMTP authorization for sending e-mail. In this case define the SMTP username and password. |
| SMTP username | Key in SMTP username obtained from your service provider for sending |
| SMTP password | Key in SMTP password obtained from your service provider for receiving |
| Outgoing SMTP port | Key in SMTP port number for outgoing e-mails (common value is 25) |
| Incoming port (IMAP4/POP3) | Key in the port number for receiving e-mail. (common value is 110 for <i>POP3</i> and 143 for <i>IMAP</i>) |
| Reply-to address | If you want the replies to be sent to another e-mail address type it in |
| Secure login | Only for POP3 connection. If your service provider requires authentication for receiving e-mail. Select <i>on</i> or <i>off</i> . |
| Retrieve e-mails | Key in the number of e-mails you want to be retrieved at a time |
| Retrieval method | Select <i>latest</i> if you want to retrieve all new e-mails or retrieve <i>Latest unread</i> if you want to fetch only latest unread e-mails |

If you have a GSM data bearer continue with the configuration. For GPRS connection, go to page 7.




2.2 GSM-DATA CONNECTION

 Next, select **SMTP connection settings**

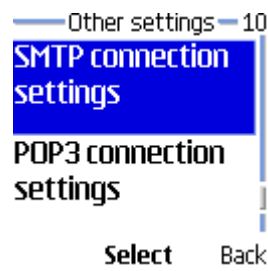

| Setting | Explanation |
|-------------------------|--|
| Proxies | Enable/disable proxies according to your service provider's support. |
| Primary proxy | Define the primary proxy |
| Secondary proxy | Define the secondary proxy |
| Data Bearer | Select GSM data |
| Bearer settings | |
| Dial-up number | Key in local or international phone number |
| Authentication type | Select normal |
| Data call type | Select <i>Analogue</i> or <i>ISDN</i> (v.110) depending on the network and modem. Check with your Internet access provider. |
| Data call speed | Select 9600/14400 |
| Login type | Select <i>Manual</i> or <i>Automatic</i> depending on the access point in use. |
| User name | Key in the user name |
| Password | Key in the password |
| Display terminal window | Select Yes to do manual user authentication for intranet connections |

 Next, select **POP3/IMAP4 connection settings** by pressing *Back* twice

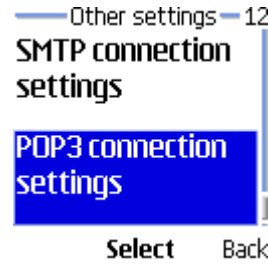




| Setting | Explanation |
|-------------------------|--|
| Proxies | Enable/disable proxies according to your service provider's support. |
| Primary proxy | Define the primary proxy |
| Secondary proxy | Define the secondary proxy |
| Data Bearer | Select GSM data |
| Bearer settings | |
| Dial-up number | Key in local or international phone number |
| Authentication type | Select normal |
| Data call type | Select <i>Analogue</i> or <i>ISDN</i> (v.110) depending on the network and modem. Check with your Internet access provider. |
| Data call speed | Select 9600/14400 |
| Login type | Select <i>Manual</i> or <i>Automatic</i> depending on the access point in use. |
| User name | Key in the user name |
| Password | Key in the password |
| Display terminal window | Select <i>Yes</i> to do manual user authentication for intranet connections |

2.3 GPRS CONNECTION

 Select **SMTP connection settings**

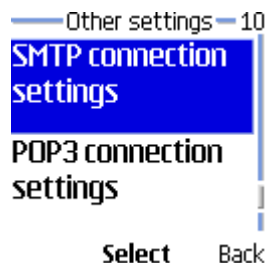


| Setting | Explanation |
|---------------------|--|
| Proxies | Enable/disable proxies according to your service provider's support. |
| Primary proxy | Define the primary proxy |
| Secondary proxy | Define the secondary proxy |
| Data Bearer | Select GPRS |
| Bearer settings | (Opens the bearer setting menu) |
| GPRS access point | Type in the GPRS access point of your service provider |
| Authentication type | Select normal |
| Login type | Select <i>Manual</i> or <i>Automatic</i> depending on the access point in use. Check with your network operator or service provider. |





| | |
|-----------|--|
| User name | Key in GPRS access point user name if required by the service provider |
| Password | Key in GPRS access point password if required by the service provider |

 Select **POP3/IMAP4 connection** settings by pressing *back* twice.

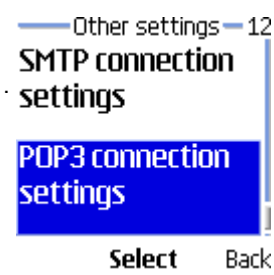

| Setting | Explanation |
|---------------------|--|
| Proxies | Enable/disable proxies according to your service provider's support. |
| Primary proxy | Define the primary proxy |
| Secondary proxy | Define the secondary proxy |
| Data Bearer | Select GPRS |
| Bearer settings | Opens the bearer setting menu |
| GPRS access point | Type in the GPRS access point of your service provider |
| Authentication type | Select normal |
| Login type | Select <i>Manual</i> or <i>Automatic</i> depending on the access point in use. Check with your network operator or service provider. |
| User name | GPRS access point user name if required by the service provider |
| Password | GPRS access point password if required by the service provider |

