

**NOKIA**

**Flier**

Copyright © 2004 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia is a registered trademark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided 'as is'. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

#### User Guide

Further detailed information for your device is given in the separate user guide. Do not use this guide in place of the complete user guide, which provides important safety and maintenance information.

9236440  
Issue 3 EN



# Flier

The Nokia **Flier** application allows you to create and locally distribute short messages containing text and a picture. When you have created your own flier you can publish it to other **Flier** users, who are close by (about 10 m) and have activated the **Flier** application on their device. **Flier** uses Bluetooth wireless technology for communicating with other devices. For information related to using Bluetooth wireless technology, please refer to the user guide of your device.

The **Flier** application contains a screen saver that you can use to view received or saved fliers. For power saving reasons, **Flier** will be automatically turned off after 12 hours of use.

The main view displays **Received fliers**, **My flier** and **Saved fliers** folders.

➡ Go to **Menu > Flier**.

Options in the Flier main view: **Open**, **Settings**, **Help**, and **Exit**.

## Viewing Received fliers

Use the **Received fliers** folder to view a list of fliers you have received. The list displays the subject of the flier and the date and time the flier was received.



**Note:** If the memory becomes full, new received fliers will replace older ones in the list.

Options in the **Received fliers** folder:

**Open**—opens the focused item. This option is not displayed if there is more than one flier marked as selected, or if the list is empty.

**Save flier**—saves the selected flier(s) to the **Saved fliers** folder.

**Send**—opens a submenu where you can select to send your flier:

- **Via multimedia**. Sends the flier via Multimedia Message Service (MMS). The MMS editor is opened. Items from the flier are displayed in the editor. The order of the items is the same as in the flier. If there was a background color defined for the flier, it is not

displayed in the MMS editor. You can send the message like any other MMS message. After sending the message the phone returns to the Received fliers view.

- *Via e-mail*. Sends the flier via e-mail. The e-mail editor is opened. Items from the flier are displayed in the editor. Text is displayed directly in the editor, and the image is added as an attachment. If there was a subject in the flier, the text from the subject is added to subject field of the e-mail. If there was a background color defined for the flier, it is not displayed in the e-mail editor. You can send the message like any other e-mail message. After sending the message the phone returns to the Received fliers view

*Activate*—activates the selected flier. This option is not displayed if there are more than one flier marked as selected, or if the list is empty. Activating a flier moves the flier in the **My flier** folder and publishes the flier.

*Delete*—deletes the selected fliers. Deleting a flier removes it from the list and the same flier is not displayed again, even if it is received again.

*Block sender*—blocks all fliers from the selected sender, (or senders, if there are more than one flier marked as selected). All fliers belonging to the blocked sender(s) are removed.

*Remove all blocks*—removes blocks from all senders.

*Mark/Unmark*—a check mark is placed next to the selected flier(s).

## Viewing My fliers

Use the **My fliers** folder to create a new flier or display your active flier.

Options in the **My fliers** folder:

*Create new*—creates a new flier.

*Send*—opens a submenu where you can select to send your flier *Via multimedia* or *Via e-mail*.

*Edit*—opens the currently active flier in Flier edit view.

*Delete*—deletes the active flier.

*Start publishing / Stop publishing*—start or stop publishing your flier to other Flier users.

*Activate saved flier*—select a flier to be activated from the **Saved fliers** folder.

## Editing fliers

You can create a new flier or edit an existing one. Go to **My flier** and select **Options > Create new** or **Options > Edit**.

Options when creating or editing a flier:

*Insert*—select *Image* to open the Media Gallery, where you can select and insert an image to the current message or *New image* to open the Camera application, where you can take a new picture to insert.

*Remove image*—removes the image from the editor.

*Background color*—opens the color selection pop-up window, where you can select the background color for the flier.

*Delete*—deletes the flier.

## Viewing Saved fliers

Use the **Saved fliers** folder to store fliers you have received or created.

Options in the **Saved fliers** folder:

*Open*—opens the focused item. This option is not displayed if there is more than one flier marked as selected, or if the list is empty.

*Create new*—creates a new flier.

*Send*—opens a submenu where you can select to send your flier *Via multimedia* or *Via e-mail*.

*Activate*—activates the selected flier. This option is not displayed if there are more than one flier marked as selected, or if the list is empty. Activating a flier puts the flier in the **My**

**flier** folder and publishes the flier.

**Edit**—opens the currently active flier in Flier edit view.

**Delete**—deletes the active flier.

**Mark/Unmark**—a check mark is placed next to the selected flier(s).

## Exiting the Flier application

Select **Menu > Flier > Exit**. *Keep publishing and receiving fliers in the background?* is displayed if you are publishing your flier, or *Keep receiving fliers in the background?* is displayed if your flier is not being published. Select **Yes** to keep the application active on the background or **No** to close the application.

If you have several applications open and want to switch from one application to another, press and hold the **Menu key**. The application switching window opens showing a list of applications that are currently open. Scroll to an application and press the navigation key to go to it.

## Using the Flier screen saver

Use the **Flier** screen saver to display received and saved fliers when you are not using the phone.

To activate the Flier screen saver, go to **Themes** and select **Options > Edit > Screen saver** and then select **Flier**. The screen saver starts after the delay set in the device settings.



**Note:** If you intend to uninstall the Flier application, ensure that the Flier screen saver is not selected in the **Themes** options.

## Changing the settings

Select **Options > Settings** to open the following list of settings:

- **Launch Flier on the phone startup**—select **On** or **Off**.

- *Tone for received flier*—select *On* or *Off*.
- *Flier screen saver*—select the fliers you want to use in the Flier screen saver. Choose *Received fliers* or *All fliers*.