




Nokia PremiCell Installation Guide

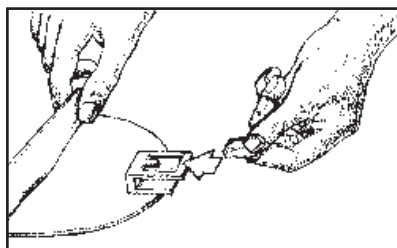


1. Install the SIM card in the SIM card holder.

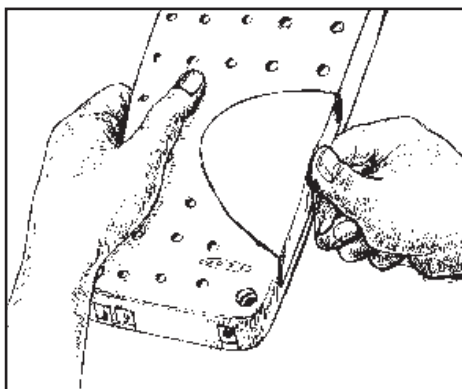


2. Close the SIM card cover.

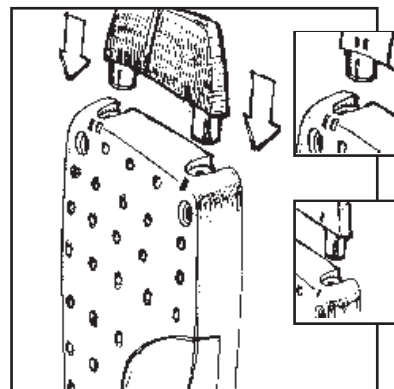


3. Connect the antenna to the terminal.
Please ensure that marks I and II on both the terminal and antenna face in the right direction.

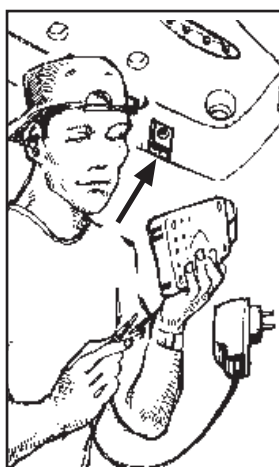

4. Connect the power cord to the DC power supply connector of the terminal. Connect the plug into the mains AC power outlet.

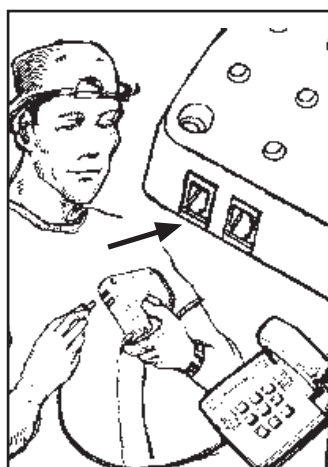


5. Connect the telephone into the terminal's telephone connector.

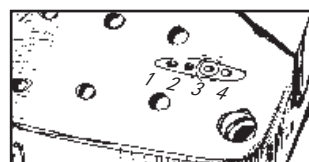

6. Light indicator (LED) 3 is blinking and LED light 4 is ON; pick up the receiver, enter the PIN code and press #.



7. LED light 1 is first blinking and then continuously ON.

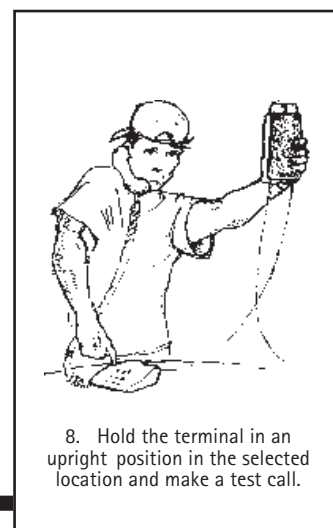


8. Hold the terminal in an upright position in the selected location and make a test call.

If the voice quality is poor or there is no connection:




9. Check the GSM-field strength, if the test was not successful. Pick up the receiver and dial 777#. Move the terminal and observe the LED lights. Hold the terminal in an upright position.

LED LIGHTS:
LED Light 1 ON - no signal
LED Lights 1-2 ON - adequate field strength
LED Lights 1-3 ON - good field strength
LED Lights 1-4 ON - excellent field strength

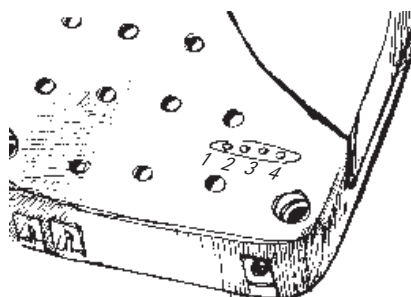

10. When the LED lights indicate that the field strength is adequate (LED lights 1-2 are ON), you have found a suitable location for the terminal. You may put the receiver down. If an adequate field strength cannot be found, try moving the terminal to another location. You may also consider installing an external antenna on your terminal.

If the test call is successful:

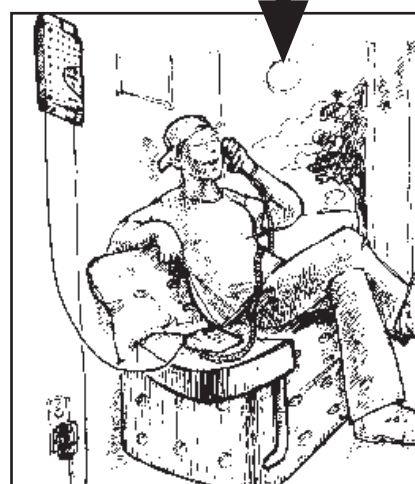

11. Install the terminal in the selected location. Please note that the distance between the terminal and the telephone has to be over two meters. After installation make a test call and ask a friend to call you. In this way you can make sure that the telephone is working properly.

NOKIA PremiCell